



SDH-41 / SDA-45



DE – ACHTUNG: Die Verwendung des INNOTECH-Produkts ist erst zulässig, nachdem die Gebrauchsanleitung in der jeweiligen Landessprache vollständig gelesen und verstanden wurde.

EN – ATTENTION: Use of the INNOTECH product is only permitted after the instruction manual has been read and fully understood in the respective language.

IT – ATTENZIONE: L'utilizzo del prodotto INNOTECH è permesso solo previa lettura e comprensione dell'intero manuale di istruzioni nella lingua del relativo paese di utilizzo.

FR – ATTENTION : L'utilisation du produit INNOTECH n'est autorisée qu'après avoir entièrement lu et compris la notice d'utilisation dans la langue du pays concerné.

NL – ATTENTIE: Dit INNOTECH-product mag pas gebruikt worden nadat u de gebruikershandleiding in de taal van het betreffende land gelezen en begrepen hebt.

ES – ATENCIÓN: Se autorizará el uso de los productos INNOTECH una vez que se hayan leído y entendido las instrucciones de uso en el idioma del país.

PT – ATENÇÃO: O uso do produto INNOTECH apenas é permitido depois de ter lido e compreendido na totalidade as instruções de uso na respetiva língua nacional.

DK – GIV AGT: Du må først bruge et produkt fra INNOTECH, efter du har læst og forstået brugsvejledningen i fuldt omfang i dit lands sprog.

SV – OBS : Denna INNOTECH-produkt får inte användas förrän bruksanvisningen på respektive lands språk har lästs igenom och förstås.

CZ – POZOR: Práce s výrobkem INNOTECH je povolena teprve po kompletním přečtení a porozumění návodu k použití v jazyku daného státu.

PL – UWAGA: Produkty firmy INNOTECH mogą być używane dopiero po dokładnym zapoznaniu się z całą instrukcją obsługi w ojczystym języku.

SL – POZOR: Uporaba izdelka INNOTECH je dovoljena šele po tem, ko ste navodila prebrali v celoti v ustreznem jeziku svoje dežele in jih tudi razumeli.

SK – POZOR: Produkt INNOTECH môžete používať až po prečítaní a porozumení celého návodu na použitie pre príslušnú krajinu.

HU – FIGYELEM: Az INNOTECH termékek használatá csak azt követően engedélyezett, hogy saját nyelvén elolvasta és megértette a teljes használati utasítást.

TR – DİKKAT: INNOTECH ürününün kullanımına ancak ilgili ülkenin dilinde sunulmuş olan kullanım kılavuzunun tamamen okunmasından ve anlaşılmasından sonra izin verilir.

ZH – 注意: 只有在仔细阅读并完全理解了当地语言的使用说明后，才能使用 INNOTECH 公司的产品。

RU – ВНИМАНИЕ: Применение изделий INNOTECH допускается только после полного прочтения и понимания инструкции по эксплуатации на соответствующем языке.

HR – PAŽNJA: Uporaba Innotech proizvoda dozvoljena je isključivo nakon što se pročitaju i razumiju kompletne Upute za uporabu na vlastitom jeziku.

NO – OBS: Bruken av Innotech-produktet er først tillatt etter at bruksanvisningen i det aktuelle landsspråket er blitt lest og forstått fullstendig.

EE – TÄHELEPANU: INNOTECH-toote kasutamine on lubatud alles siis, kui vastavas riigikesle kasutusjuhend on täielikult läbi loetud ja sellest on aru saadud.

LV – UZMANĪBU: INNOTECH izstrādājumu drīkst lietot tikai pēc tam, kad ir pilnībā izlasīta un saprasta lietošanas instrukcija attiecīgajā valsts valodā.

FI – HUOMIO: INNOTECH-tuotteen käyttö on sallittu vasta, kun kyseisen maan kielellä laadittu käyttöohje on luettu perusteellisesti ja sen sisältö on ymmärretty.

LT – DĖMESIO: Šį INNOTECH gaminį leidžiama naudoti tik atitinkama šalies kalba perskaicius ir supratus visą jo naudojimo instrukciją.

| | | |
|------|--|----|
| [2] | DESCRIPTION OF SYMBOLS | 3 |
| [3] | SAFETY INSTRUCTIONS | 4 |
| [4] | COMPONENTS/MATERIAL | 6 |
| [5] | PRODUCT SUITABILITY/APPROVAL | 8 |
| [6] | INSPECTION | 9 |
| [7] | WARRANTY | 10 |
| [8] | SIGNS & MARKINGS | 10 |
| [9] | DIMENSIONS | 12 |
| [10] | INSTALLATION SUBSTRUCTURE | 13 |
| [11] | ANCHORAGE OPTIONS | 16 |
| [12] | INSTALLATION TOOLS | 17 |
| [13] | INSTALLATION INSTRUCTIONS | 17 |
| [14] | INSTALLATION OVERVIEW | 17 |
| [15] | INSTALLATION VARIANT RAFTER INSULATION | 22 |
| [16] | LOAD DIRECTIONS | 27 |
| [17] | DISPOSAL | 27 |
| [18] | ACCEPTANCE LOG | 28 |
| [19] | INFORMATION ON THE SAFETY SYSTEM | 30 |
| [20] | TEST LOG | 31 |
| [21] | DEVELOPMENT & SALES | 33 |

**Warning/danger information**

An IMMEDIATE threat of danger that can cause serious physical injuries or death.



A POTENTIALLY dangerous situation that can cause serious physical injuries or death.



A POTENTIALLY dangerous situation that could lead to minor physical injuries and damage to property.



Wear gloves!



Wear safety glasses!

**Additional information/instructions**

correct



incorrect



Comply with manufacturer's instructions/applicable instruction manuals.

Comply with the following safety instructions and the latest state of the art.

3.1 GENERAL

- The safety system should be installed by trained and instructed installers only.
- The safety system should only be installed or used by persons who are:
 - trained in "Personal Protective Equipment" (PPE),
 - in good physical and mental health (medical conditions such as cardiovascular problems, intake of medicines, consumption of alcohol, etc. negatively affect the safety of the user.)
 - familiar with the locally applicable safety regulations.
- A plan must be available that specifies the rescue procedures for all possible emergencies.
- Before starting work, ensure that no objects from the work site can fall to the ground. The area below the work site (pavement, etc.) must be kept clear.
- You should plan, install and use the safety system in such a way that, provided the "Personal Protective Equipment" is used properly, no one can fall over the edge (see planning documents at www.innotech-safety.com).
- The safety system must not be used as an anchor point for a horizontal lifeline system which complies with EN 795 C.
- At the access to the safety system, the positions of the safety roof hooks/roof anchor points must be documented by plans (e.g. plan view sketch of the roof).
- After an incident and the resulting strain, you must stop using the safety system and the safety system must be inspected by a trained installer immediately (damages, fixation, etc.).
- If used in a non-natural environment (e.g. chemical substances), the manufacturer must be contacted.
- Do not make any changes to the safety system.
- During the installation/use of the safety system, the relevant health and safety regulations have to be taken into consideration, PPE and fall protection has to be worn during installation and/or use.
- When the safety system is used by sub contractors the instructions manual has to be signed by the operating installers.
- The instruction manual has to be translated in the appropriate national language when sold to non german speaking countries.

3.2 FOR FITTERS: FOR SAFE INSTALLATION

- Ensure that stainless steel does NOT come into contact with swarf or steel tools. This may lead to corrosion.
- The installer has to make sure the substructure is suitable for the purpose. In case of doubt contact a structural engineer.
- Ensure a professional installation and keep records of the installation procedure.




In case of any doubt during the installation process please contact the manufacturer immediately.

3.3 FOR USERS: FOR SAFE USE

- The minimum free space necessary under the edge is calculated as follows: Manufacturer's specification of the "Personal Protective Equipment" used including deflection + body size + 1 m safety distance.
- Attachment to the safety system must always be made by means of the attachment eye, using a carabiner, and this must be used with personal protective equipment as per EN 361 (safety harness) and EN 363 (fall arrest system).
- For horizontal use, only fasteners that are suited for this purpose and that have been tested for the respective edge design (sharp edges, trapezoidal sheeting, steel girders, concrete, etc.) may be used. The correct use of the lanyard limits the maximum force on the user to 6 kN during a fall arrest event.
- Correct use of the individual elements including the "Personal Protective Equipment" must be ensured, or the functionality of the safety system CANNOT be guaranteed.
- Do not use the safety system when wind speeds are higher than normal.
- To avoid roof avalanches on inclined roofs a suitable snowguard system must be installed.
- Children, adolescents and pregnant women are NOT permitted to use the safety system.

4.1 SDH-41 | SAFETY ROOF HOOKS ON FOOT PARTS

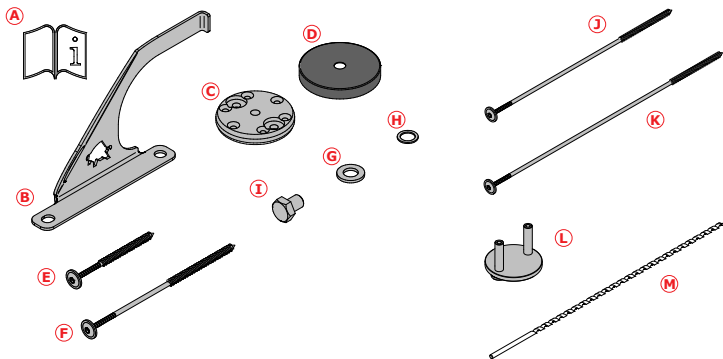

- A) 1x instruction manual
- B) 1x base bracket: stainless steel 1.4301
- C) 2x stilt with silicon pad: aluminium
- D) 2x cover mounting plate: aluminium
- E) 4x wood screw 8.0x120 mm:
steel, zinc-nickel
- F) 4x wood working screw 8.0x220 mm:
steel, zinc-nickel
- G) 2x washer Ø 13 mm: stainless steel 1.4301
- H) 2x Schnorr washer S12: stainless steel 1.4301
- I) 2x hex bolt M12: stainless steel 1.4301

Prefa spare tools package

(Not included in the delivery)

J) 4x wood working screw**8.0x350 mm:**

steel, zinc-nickel

K) 4x wood working screw**8.0x450 mm:**


steel, zinc-nickel

+ installation set

(Not included in the delivery)

L) 1x drilling jig**M) 1x ribbed drill rod****6.0x460 mm**

4.2 SDA-45 | SINGLE ANCHOR POINT ON FOOT PARTS

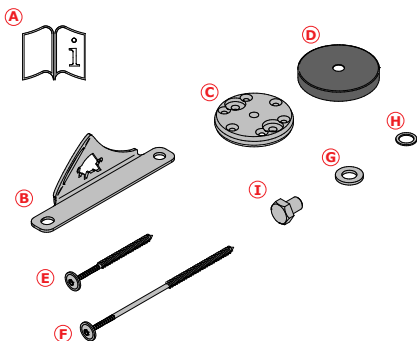

- A) 1x instruction manual
- B) 1x base bracket: stainless steel 1.4301
- C) 2x stilt with silicon pad: aluminium
- D) 2x cover mounting plate: aluminium
- E) 4x wood screw 8.0x120 mm:
steel, zinc-nickel
- F) 4x wood working screw 8.0x220 mm:
steel, zinc-nickel
- G) 2x washer Ø 13 mm: stainless steel 1.4301
- H) 2x Schnorr washer S12: stainless steel 1.4301
- I) 2x hex bolt M12: stainless steel 1.4301

PREFA/INNOTECH "SDH-41" was developed as a **safety roof hook** for the personal safety of **2 persons** (including 1 person for administration of first aid) and is suitable for the following safety systems as per EN 363:2008:

- Restraint systems
- Workplace positioning systems
- Fall arrest systems
- Rescue systems
- Ladder hooks as per EN 517 B

PREFA INNOTECH "SDA-45" was developed as a **safety anchor point** for personal safety for **2 people** (including 1 person for providing primary assistance), and is suitable for the following fall protection systems as per EN 363:2008:

- Restraint systems
- Workplace positioning systems
- Fall arrest systems
- Rescue systems



DANGER TO LIFE due to incorrect use.

- PREFA/INNOTECH "SDH-41/SDA-45" **MUST** only be used for personal safety.
- PREFA/INNOTECH „SDH-41" is also suitable for attaching roofing ladders and for fixing roofing chairs.
- Never attach undefined loads to the safety system.



Comply with the manufacturer information for the Personal Protective Equipment employed.

PREFA/INNOTECH "SDH-41" has been tested and certified as per **EN 517:2006 TYPE B**.
The notified authority participating in the type test is:
TÜV AUSTRIA GmbH, Deutschstraße 10, A-1230 Wien; C€ 23/0408

PREFA/INNOTECH "SDA-45" has been tested and certified as per **EN 795:2012 TYPE A & CEN/TS 16415:2013**.

The notified authority participating in the type test is:
TÜV AUSTRIA GmbH, Deutschstraße 10, A-1230 Wien

6.1 INSPECT BEFORE EVERY USE

PREFA/INNOTECH "SDH-41/SDA-45" must be visually inspected for any obvious defects.

**DANGER TO LIFE due to damage to the PREFA/INNOTECH "SDH-41/SDA-45".**

- PREFA/INNOTECH "SDH-41/SDA-45" must be in perfect working condition.
- Do NOT continue to use PREFA/INNOTECH "SDH-41/SDA-45" if
 - There is obvious damage or wear to its components,
 - Other defects have been observed (loose threaded connections, deformation, corrosion, wear),
 - Strain has occurred due to a fall (exception: provision of first aid),
 - it is not possible to read the product labelling.

Inspect the entire safety system's suitability for use by means of the acceptance protocol and test log.



If there is doubt about the safe functioning of the safety system, do NOT continue to use it, and have it inspected by a specialist/competent expert (written documentation). If necessary, the product must be replaced.

6.2 ANNUAL REVISION

Have PREFA/INNOTECH "SDH-41/SDA-45" inspected at least once a year by a specially trained technician who is familiar with the safety system. The user's safety depends on the effectiveness and durability of the equipment.

Shorter intervals between inspections may be required, depending on the intensity of use and the environment (e.g. in corrosive atmospheres, etc.)

Document the inspection by the specialist/competent expert in the test log of the instruction manual, and keep this with the instruction manual.



Use the test intervals indicated in the test protocol.

7

WARRANTY

If there is strain (a fall, weight of snow, etc.) the warranty claim is void for those components that are designed to absorb energy or to deform.



For system installation and for components planned and installed under the responsibility of specialised installation companies, PREFEA/INNOTECH® assumes no responsibility or warranty in the case of improper installation.

8

SIGNS & MARKINGS

8.1 SDH-41 | SAFETY ROOF HOOKS ON FOOT PARTS


- | | |
|--|---|
| A) Name or logo of the manufacturer/retailer: | INNOTECH®/PREFEA |
| B) Type designation: | SDH-41 |
| C) Signs stating that the instructions specified in the manual must be followed: | |
| D) Maximum number of persons that can be secured: | 2 (including 1 person for first-aid administration) |
| E) EC conformity marking/ Identification number of the notified body: | CE 23/0408 |
| F) Year of manufacture and manufacturer's serial number: | JJJJ-...-... |
| G) Number of the relevant standard: | EN 517:2006 TYPE B |



Declaration of Performance (DoP) No. LE-004

Download: www.prefea.com/DOP


8.2 SDA-45 | SINGLE ANCHOR POINT ON FOOT PARTS

- | | |
|--|---|
| A) Name or logo of the manufacturer/retailer: | INNOTECH®/PREFA |
| B) Type designation: | SDA-45 |
| C) Signs stating that the instructions specified in the manual must be followed: |  |
| D) Maximum number of persons that can be secured: | 2 (including 1 person for first-aid administration) |
| E) Year of manufacture and manufacturer's serial number: | JJJJ-...-... |
| F) Number of the relevant standard: | EN 795:2012 TYPE A CEN/TS 16415:2013 |




9.1 SDH-41 | SAFETY ROOF HOOKS ON FOOT PARTS

[mm]

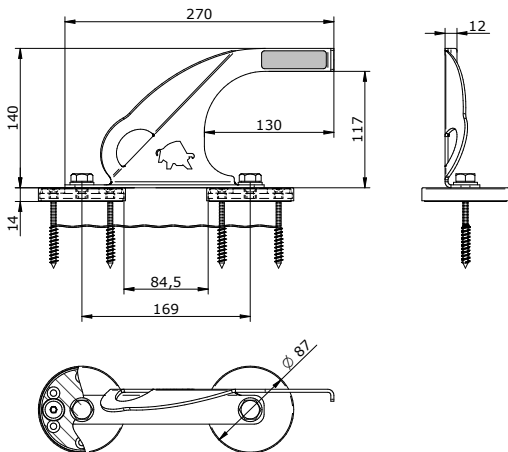

9.2 SDA-45 | SINGLE ANCHOR POINT ON FOOT PARTS

[mm]

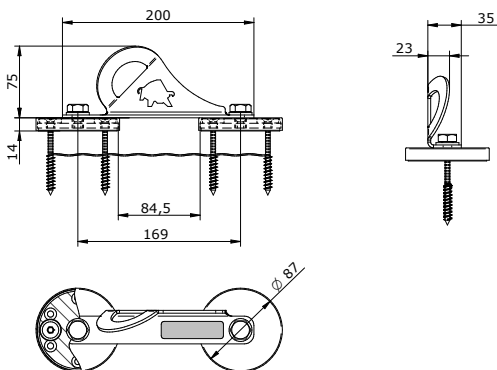

The basic requirement for professional/proper installation is

- a PREFA roof system laid in compliance with the applicable standards/regulations and the PREFA guidelines: roof tile, roof tile R.16, roof shingle, roof shingle DS.19, rhomboid shingle 29x29, rhomboid shingle 44x44, roof panel FX.12,
- a statically load-bearing wooden substructure (at least 8/8 cm with at least 24 mm full formwork, in the case of rafter insulation min. 10x14 cm) and
- the use of the original fasteners listed in these instructions for use.



DANGER

DANGER TO LIFE as a result of installation on unsuitable installation substructure.

- Ensure that the substructure is statically load-bearing. In case of doubt, have the installation substructure checked by a structural engineer or by the manufacturer.


10.1 INSTALLATION ON FORMWORK

Single-shell roof construction:

- 8x120 mm HBS Complex


Double-shell roof construction:

- 8x220 mm HBS Complex

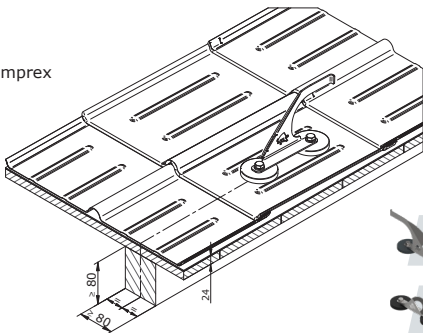


ATTENTION

When installing, pay attention to the centre of the roof rafter!

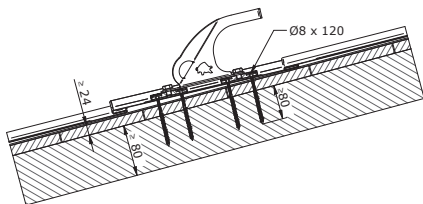

10.2 INSTALLATION ON ROOF BATTENS

- 8x220 mm HBS Complex

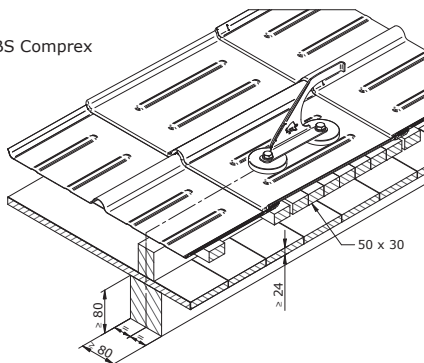

SDH
-41




SDA
-45



When installing on battens, in the area of the safety roof hook, the battens must be replaced by an equally strong formwork (installed on at least 3 rafters).



When installing, pay attention to the centre of the roof rafter!

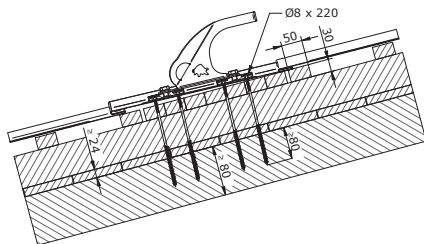


Only use original wood screws.

10.3 INSTALLATION ON RAFTER INSTALLATION




Minimum requirements for roof-suitable insulation:

- Load capacity at 10% compression at least 50kPa
- Point load at 5 mm compression \geq 550N

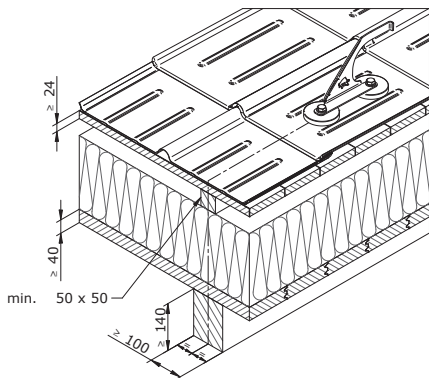



When installing, pay attention to the centre of the roof rafter!

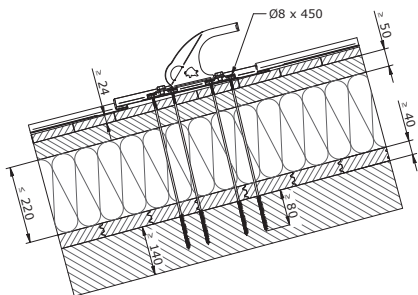



OPTIONAL: Only use original wood working screws (8x350 mm or 8x450 mm) (see PREFA "Spare tools package")
Not included in the delivery!

[mm]



PREFA roof tile

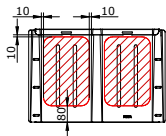



PREFA roof tile R.16

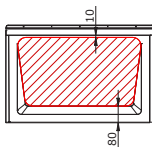

PREFA roof shingle





PREFA roof shingle DS.19





PREFA rhomboid 29x29



PREFA rhomboid 44x44

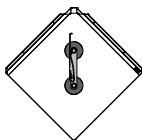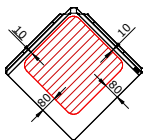


PREFA roof panel FX.12

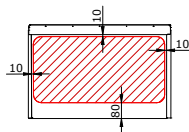


12 INSTALLATION TOOLS

[mm]




Tx = 40

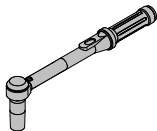

AF = 19

13 INSTALLATION INSTRUCTIONS

[m]

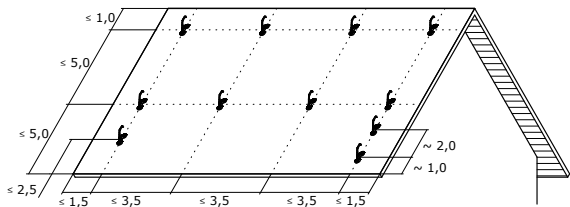

14 INSTALLATION OVERVIEW



RISK TO LIFE if NOT correctly installed.

- Install PREFA/INNOTECH "SDH-41/SDA-45" correctly as per the user instructions.



INJURIES from sharp edges on components.



- Wear protective gloves for the installation work.



EYE INJURIES from dust/splinters/liquid.




- Wear eye protection/safety glasses for the installation work.


1.

[mm]

2x

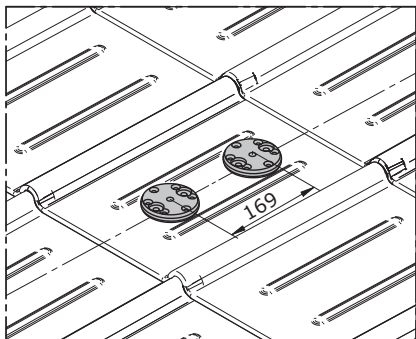

When installing, pay close attention to the centre of the roof rafter!


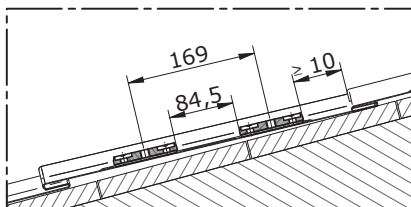


2.

4x




Tx = 40

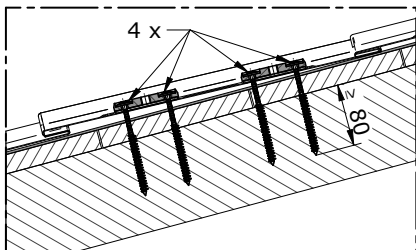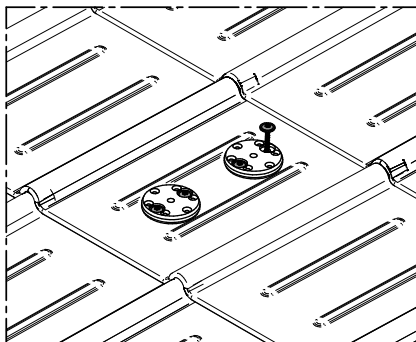


OPTIONAL:

Pre-drilling - \varnothing 4.1 mm,
drilling depth approx. 50 mm

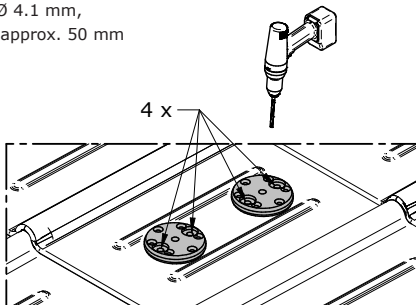

3.

2x

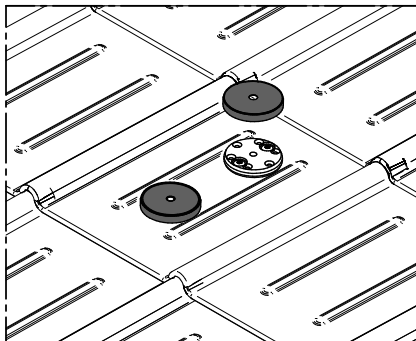


4.








AF = 19
2 x 35 Nm



Comply with the specified tightening torque.

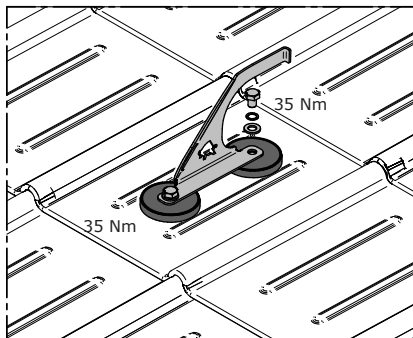


5.

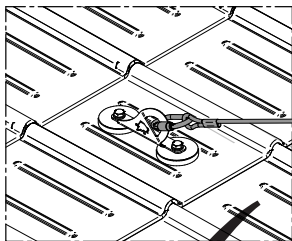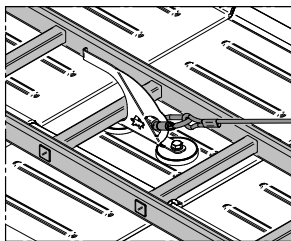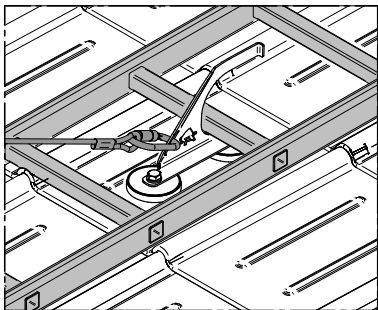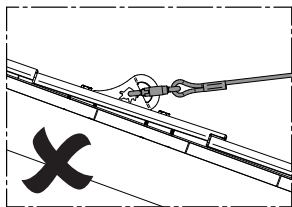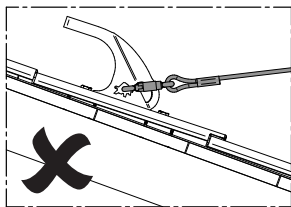
**DONE!**

15 INSTALLATION TOOL RAFTER INSULATION

[mm]

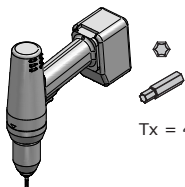

Tx = 40

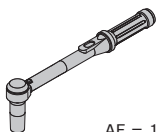


AF = 19



PREFA drilling jig



Ribbed drill rod
Ø 6 x 460



Ø 8.5

15 INSTALLATION VARIANT RAFTER INSULATION

1.


[mm]

Pre-drilling - Ø 8.5 mm, drilling depth
approx. 5 mm (at least roof system)

2x





4 x

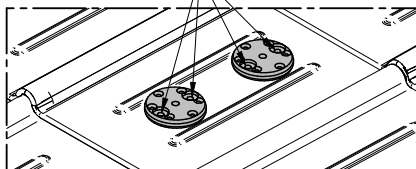

1.

Pre-drill with the help of the $\text{Ø}6 \times 460 \text{ mm}$ auger and the drilling jig into the load-bearing structure

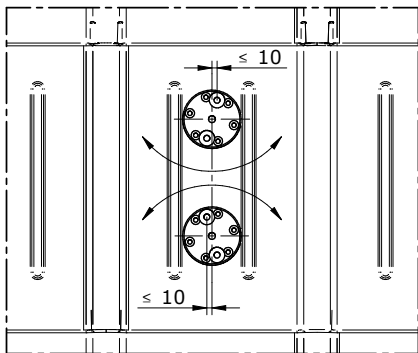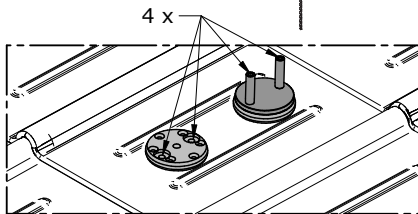

If the drilling process is blocked by a screw of the roof construction, the foot part may be extended by max. 10 mm (see sketch) so it can be twisted.



15 INSTALLATION VARIANT RAFTER INSULATION

2.

4x




Tx = 40

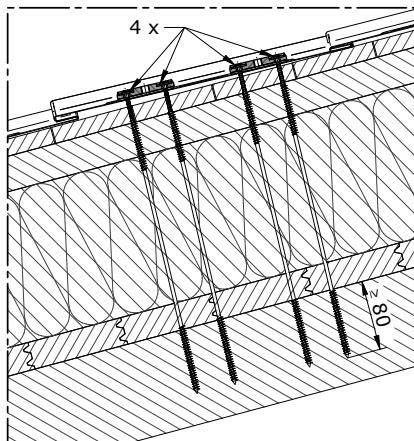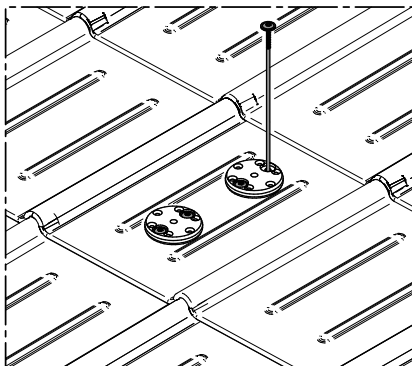

15 INSTALLATION VARIANT RAFTER INSULATION

3.

2x

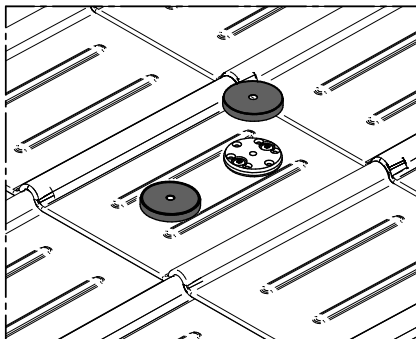

EN


4.






AF = 19
2 x 35 Nm





Comply with the specified tightening torque.

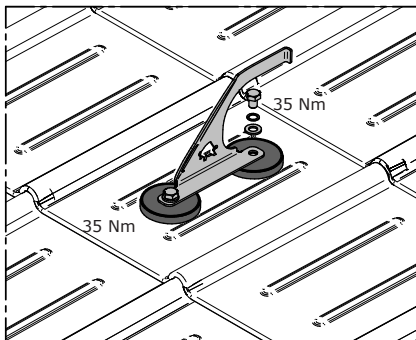

5.

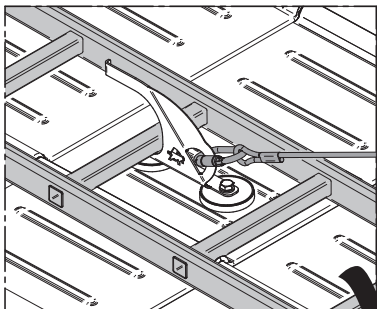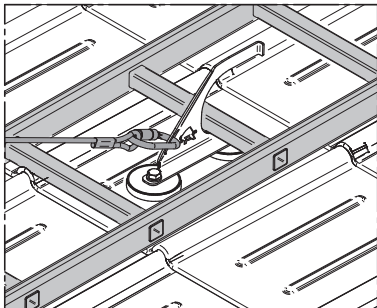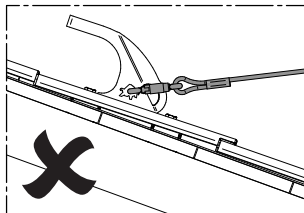**DONE!**

16 LOAD DIRECTIONS

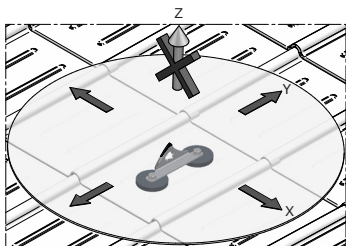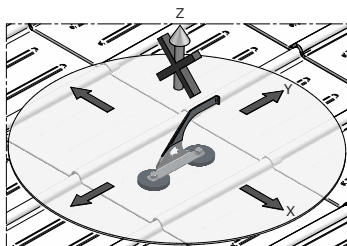

DANGER TO LIFE when used in UNAPPROVED load directions.

- Only use PREFEA/INNOTECH "SDH-41/SDA-45" in the approved load directions (parallel to the installation surface/at right angles to the support).
- Work loads/application loads in the "Z-axis" are NOT permitted.

17 DISPOSAL

Do NOT dispose of the safety system in household waste.
As per national requirements, collect the used parts together, and dispose of them in an environmentally correct manner.

ACCEPTANCE LOG NO. _____ (PART 1/2)

S D H - 4 1 / S D A - 4 5

ORDER NUMBER: _____

PROJECT: _____

CLIENT: _____ Specialist: _____ 

Company address: _____

CONTRACTOR: _____ Specialist: _____ 

Company address: _____

INSTALLATION: _____ Specialist: _____ 

Company address: _____

ACCEPTANCE LOG NO. _____ (PART 2/2)

S D H - 4 1 / S D A - 4 5

FASTENER/PHOTO DOCUMENTATION

PRODUCT: Item _____ Year of construction/Serial number: _____
(Type designation)

Installation substructure: _____
(e.g. for sheet metal roofs: roof manufacturer, profile, material, sheet metal thickness, rafter insulation, etc.)

| Date: | Location: | Dowel type: Designation (e.g. HBS etc.) | Penetration depth: into load-bearing wood [mm] | Tightening torque: [Nm] | Photos: (storage location) |
|-------|-----------|---|--|-------------------------------|-------------------------------|
| | | | | | |
| | | | | | |

The undersigned installation company ensures proper processing (edge clearances, background inspection, proper cleaning of the drill holes, adherence to curing times, processing temperature and dowel manufacturer guidelines, etc.).

The client accepts the work performed by the contractor. The instruction manual, documentation of the fastenings, and photo documentation and test logs have been transferred to the client (building owner) and are to be made available to the user. For system access to the safety system, the positions of the safety roof hooks must be documented by the builder using plans (for example, sketch of the roof top view).

The expert installer familiar with the safety system confirms that the installation work has been executed correctly, as per the state of the art, and as per the manufacturer's instructions for use. The technical safety reliability is confirmed by the installation company.

Handover of: (e.g. Personal Protective Equipment (PPE), fall arrest devices (HSG), storage cabinet, etc.)

Item _____ Item _____ Item _____ Item _____

Comments: _____

Name: _____
Client

Contractor (expert who is familiar with the safety system)

Date, company stamp, signature

Date, company stamp, signature

INFORMATION ON THE EXISTING SAFETY SYSTEM

The house owner must affix this notice in a conspicuous location at the access point to the system.

This system must be used as per the state of the art and the instruction manual.

The storage location for the instruction manuals, test logs, etc. is:

- Overview plan with the location of the safety roof hooks/roof anchor points:

Do not sketch breakthrough-proof areas (such as skylights and/or light strips)!

The maximum limit values of the anchorage devices are to be found in the applicable instruction manual and on the identification plate of the safety system.

If there is strain caused by fall, or if in doubt, the anchorage device must be taken out of service immediately and sent to the manufacturer, or to a specialised workshop for inspection and repair.

This applies if there is damage to the anchorage equipment.

TEST LOG NO. _____ (PART 1/2)

S D H - 4 1 / S D A - 4 5

ORDER NUMBER: _____

PROJECT: _____

INTERVAL DETERMINATION: _____

ANNUAL SYSTEM INSPECTION EXECUTED ON: _____

LATEST DATE FOR ANNUAL SYSTEM INSPECTION: _____

CLIENT: _____ Specialist: _____ 

Company address: _____

CONTRACTOR: _____ Specialist: _____ 

Company address: _____

| INSPECTION POINTS: | DEFECTS DETECTED: (Description of defects/measures) |
|--|---|
| <input checked="" type="checkbox"/> inspected and in order! | |
| DOCUMENTATION: | |
| <input type="checkbox"/> Instruction manual | |
| <input type="checkbox"/> Inspection logs/clamp log/photo documentation | |
| PPE (Personal Protective Equipment against falls from a height): Inspection as per manufacturer's specifications | |
| <input type="checkbox"/> Expiry date | |
| <input type="checkbox"/> Annual inspection performed | |
| <input type="checkbox"/> Not checked (no authorisation) | |
| VISIBLE PARTS OF THE SAFETY ROOF HOOK/ROOF ANCHOR POINT: | |
| <input type="checkbox"/> No deformation | |
| <input type="checkbox"/> No corrosion | |
| <input type="checkbox"/> Firmly seated | |
| <input type="checkbox"/> Tightening torque of the fastening bolts | |
| <input type="checkbox"/> | |

TEST LOG NO. _____ (PART 2/2)

S D H - 4 1 / S D A - 4 5

ORDER NUMBER: _____

PROJECT: _____

| INSPECTION POINTS: <input checked="" type="checkbox"/> inspected and correct! | DEFECTS DETECTED: (Description of defects/measures) |
|---|---|
| ROOF INTEGRATION: | |
| <input type="checkbox"/> No damage | |
| <input type="checkbox"/> No corrosion | |
| <input type="checkbox"/> | |

Acceptance result: The safety system corresponds to the manufacturer's instruction manual, and to the state of the art. Technical safety reliability is confirmed.

Comments: _____

Name: _____
Client

Contractor (expert who is familiar with the safety system)

Date, company stamp, signature

Date, company stamp, signature

INNOTECH® Arbeitsschutz GmbH, Laizing 10, 4656 Kirchham/Austria
www.innotech-safety.com



PREFA Aluminiumprodukte GmbH, Werkstraße 1, 3182 Markt/Lilienfeld, Austria
www.prefa.com

